

Buttons robot

On/Off
Press for start or pause
Press (5 sec) for turn on/off
Press together with Home (5 sec)
for WLAN connection

Home
Press to send robot to station
Press together with On/Off (5 sec)
for WLAN connection

Switch mode
Press to switch cleaning mode:
dry cleaning or wet & dry cleaning



Lights robot

**Device boot/
Firmware update**

LED On/Off & Home: white breathing
LED stripe: white breathing

Network connection

LED On/Off & Home: blue breathing
LED stripe: off

Robot standby

LED On/Off & Home: off
LED stripe: off

Robot charging

LED On/Off & Home: green breathing
LED stripe: off

Robot cleaning

LED On/Off & Home: yellow (dry cleaning)
or blue (wet & dry cleaning)
LED stripe: yellow (dry cleaning)
or blue (wet & dry cleaning)

Error

LED On/Off & Home: red blinking
LED stripe: red blinking

Kärcher Indoor Robots App

Scan for details



www.kaercher.com/int/home-garden/robot-vacuums-and-mops.html

Operating Instructions



KÄRCHER

RVF 7
COMFORT
QUICKSTART
GUIDE



Buttons station

On/Off
Press for start

Switch mode
Press to switch cleaning mode of robot:
dry cleaning or wet & dry cleaning

Self-cleaning
Press to activate self cleaning of robot



Lights station

Station standby

All lights off

Device charging

LED stripe: green breathing

Robot cleaning

LED stripe: white

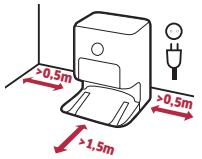
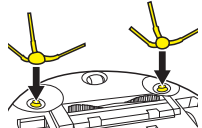
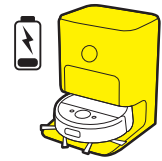
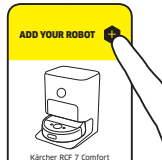
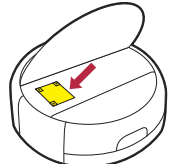
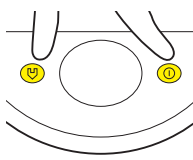
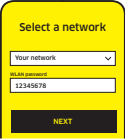
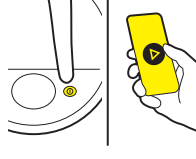
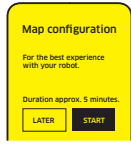
Self cleaning activated

LED stripe: blue breathing (wet & dry mode)
yellow breathing (dry mode)

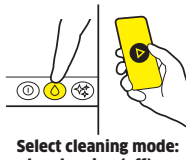
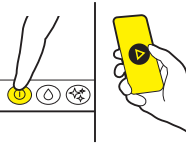
Error

LED stripe: red blinking
LED tanks: red (depending on tank error)

Install device

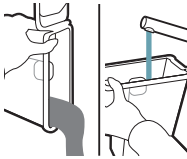
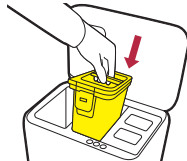
- 
Consider correct positioning
- 
Attach side brushes
- 
Place the robot in Multifunctional station
- 
Download Kärcher Indoor Robots App
- 
Add robot
- 
Scan QR code
- 
Press On/Off and Home to connect to WLAN
- 
Network configuration
- 
Device is now ready for use
- 
Start mapping
- 
Follow the configuration steps in the App
- 
Device is now ready for use

Start cleaning

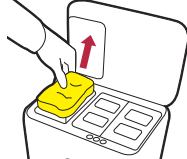
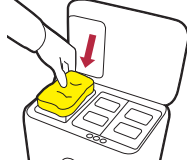
- 
Detach fresh water tank
- 
Fill fresh water container with water and detergent (3 caps = 20 ml)
- 
Add foam stop (optional, if needed) (1 small bottle = 30ml)
- 
Attach fresh water tank
- 
Select cleaning mode: dry cleaning (off) or wet & dry cleaning (blue)
- 
Start cleaning

Cleaning of station



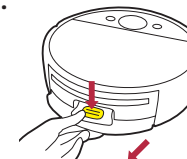
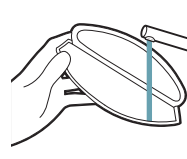
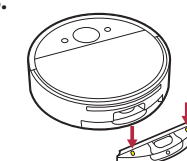
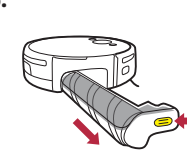
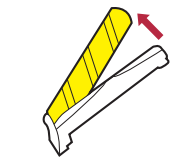
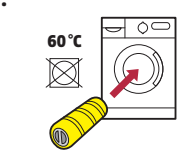
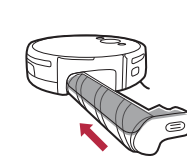
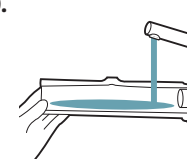
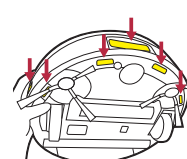
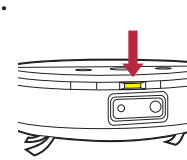
- 
Detach dirt water container
- 
Empty and clean dirt water container
- 
Attach dirt water container
- 
Detach fresh water tank
- 
Refill fresh water container with water and detergent (3 caps = 20 ml)
- 
Attach fresh water tank

Changing of filter bag (optional, when needed)

- 
Detach filter bag
- 
Dispose filter bag
- 
Attach new filter bag

Cleaning of robot



- 
Detach dirt water tank
- 
Clean dirt water tank
- 
Dry sensors
- 
Attach dirt water tank
- 
Remove roller unit
- 
Detach roller
- 
Wash roller in washing machine
- 
Attach roller unit
- 
Clean roller unit
- 
Wipe all sensors
- 
Wipe LIDAR sensor