

Buttons



On/Off

Press for start or pause
Press (5 sec) for turn on/off
Press together with Home (5 sec)
for WLAN connection

Home

Press to send robot to station
Press together with On/Off (5 sec)
for WLAN connection

Switch mode

Press to switch cleaning mode:
dry cleaning or
wet & dry cleaning

Lights

Device boot/ Firmware update

LED On/Off & Home: white breathing
LED stripe: white breathing

Network connection

LED On/Off & Home: blue breathing
LED stripe: off

Robot standby

LED On/Off & Home: off
LED stripe: off

Robot charging

LED On/Off & Home: green breathing
LED stripe: off

Robot cleaning

LED On/Off & Home: yellow (dry cleaning)
or blue (wet & dry cleaning)
LED stripe: yellow (dry cleaning)
or blue (wet & dry cleaning)

Error

LED On/Off & Home: red blinking
LED stripe: red blinking

Kärcher Indoor Robots App



Scan for details



www.kaercher.com/int/home-garden/robot-vacuums-and-mops.html

Operating Instructions



KÄRCHER

RVF 7 QUICKSTART GUIDE



Install device

- Consider correct positioning
- Attach side brushes
- Place the robot in charging station
- Download Kärcher Indoor Robots App
- Add robot
- Scan QR code
- Press On/Off and Home to connect to WLAN
- Network configuration
- Start mapping
- Follow the configuration steps in the App
- Device is now ready to clean

Start cleaning

Dry cleaning

- Select cleaning mode
- Start cleaning

Wet and dry cleaning

- Select cleaning mode
- Detach fresh water tank
- Fill fresh water container with water and detergent (5 caps = 10ml)
- Add FoamStop (optional, if needed) (2 caps = 4ml)
- Attach fresh water tank
- Start cleaning

Cleaning of device



- Detach dirt water tank
- Clean dirt water tank
- Clean sensors
- Attach dirt water tank
- Detach dry dirt box
- Empty dry dirt box and reattach
- Remove roller unit
- Detach and wash roller in washing machine
- Clean roller unit
- Attach roller unit
- Wipe all sensors
- Wipe LIDAR sensor