

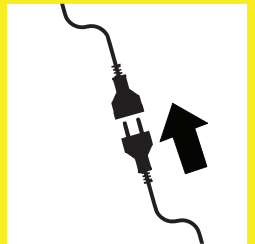
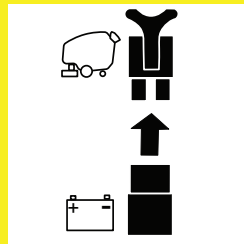
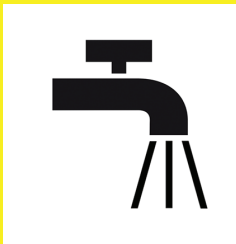
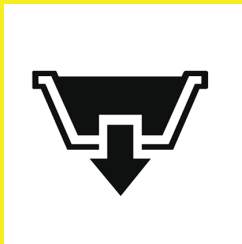
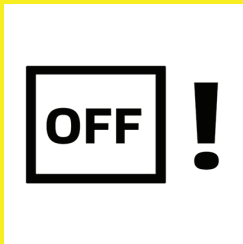
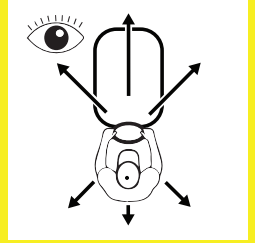
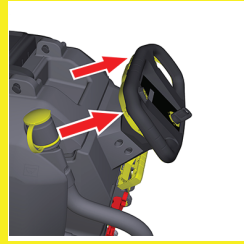
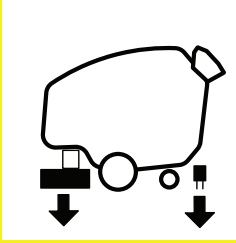
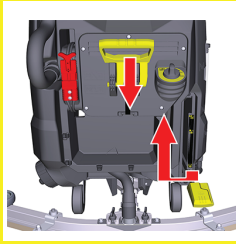
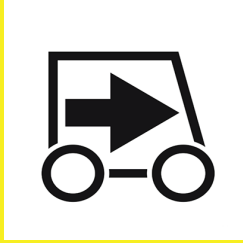
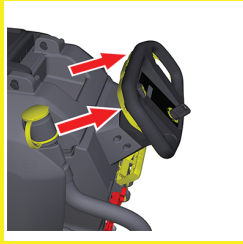
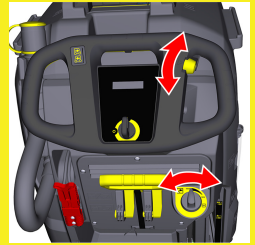
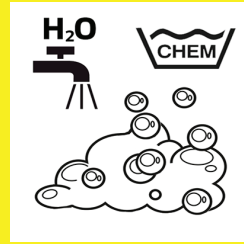
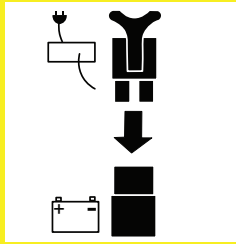
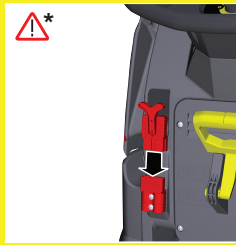
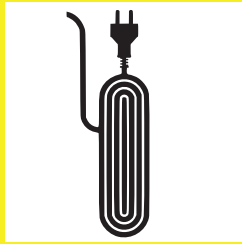


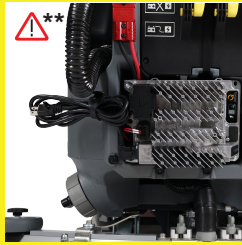

KÄRCHER

makes a difference

QUICKSTART GUIDE

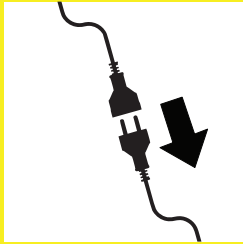

WARNING:

*During charging, the Anderson connector must remain unplugged.

**You must Bundle and secure Charger Power Cord with the strap before operate the machine.

9.804-926.0 07/26